

STAINLESS STEEL FLOAT STEAM TRAP SK61

FEATURES


The SK61 is a float trap dedicated to the draining of condensate in the steam lines. The SK61 has stainless steel body with threaded or flanged connections with standardized face to face dimension. This steam trap is able to drain large capacities of condensate and is well adapted to the changes of flowrates. For this reason it is recommended for the draining of process like heat exchangers, autoclaves, condensers in the field of chemical processing, food and drugs industries. As a standard the SK61 is fitted with an thermostatic capsule for air elimination in starting phase. It must be installed horizontally and several mechanisms are available depending on the differential pressure.

AVAILABLE MODELS

BSP screwed end connections : G 1/2" - G 3/4" - G 1".
Connecting with flanges PN25 : DN15, DN20 to DN25.
 ΔP 4,5/10/14 bar.

LIMITS OF USE

Max allowed fluid pressure : PS	25 Bar
Max allowed fluid temperature TS :	+0 °C / +250 °C
Use on saturated steam	16 bar / +205 °C

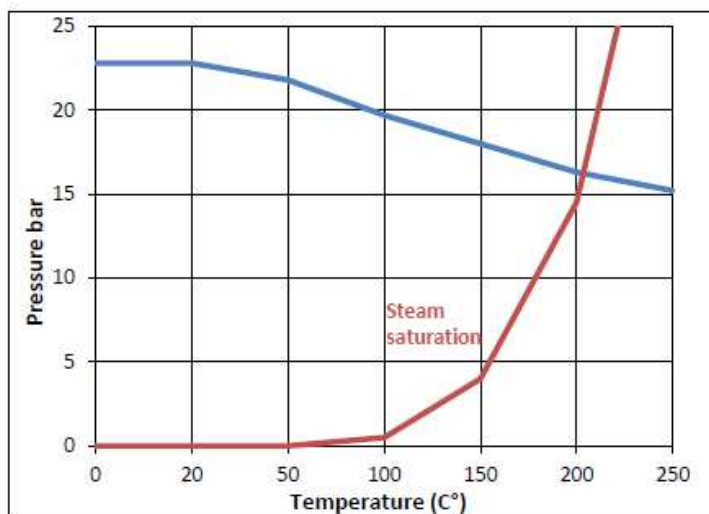



STAINLESS STEEL FLOAT STEAM TRAP SK61

REGULATIONS AND STANDARD OF CONSTRUCTION

Item	Standard
Pressure equipment directive 2014/68	G 1/2" to G 1" : A4 § 3 excluded
	DN 15 to 25 : A4 § 3 excluded
Materials of stainless steel	EN 1503-1
BSP theard	ISO 228
Flanges	EN 1092-1
Face to Face dimensions	EN 26554

CONSTRUCTION

N°	Item	Material
1	Body	Stainless steel 1.4408
2	Cover	Stainless steel 1.4408
3	Thermostatic capsule	Stainless steel 304
4	Capsule seat	Stainless steel 304
5	Float seat	Stainless steel 304
6	Ball	Stainless steel 440 C
7	Float lever	Stainless steel 304
8	Float	Stainless steel 304

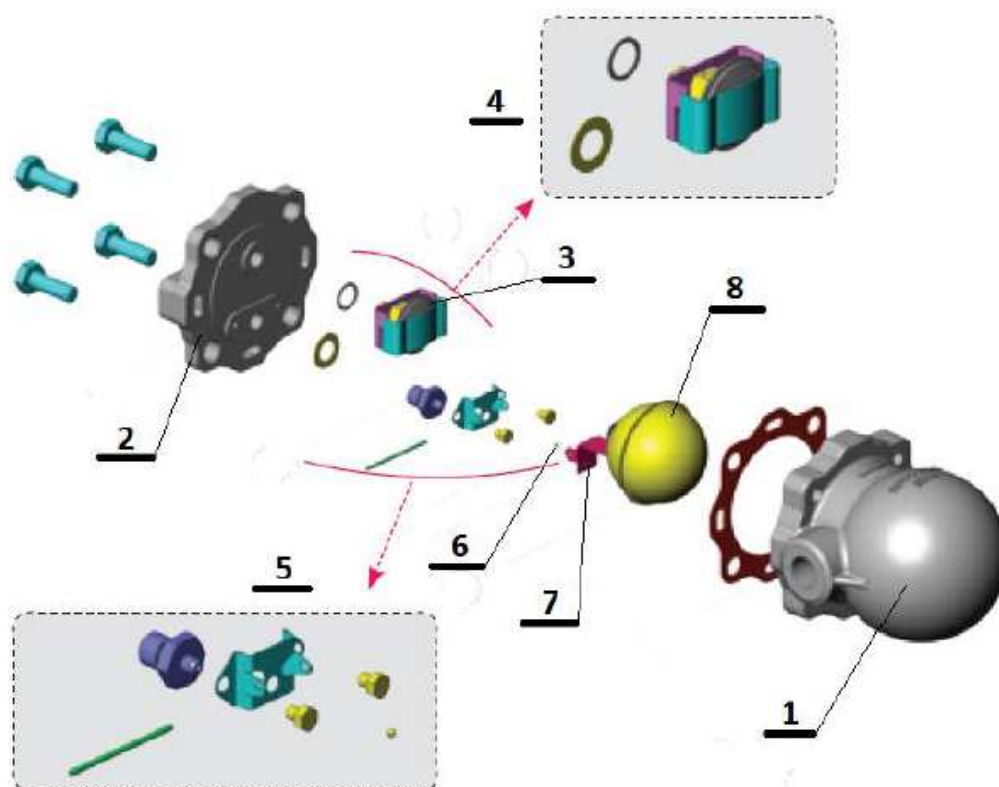
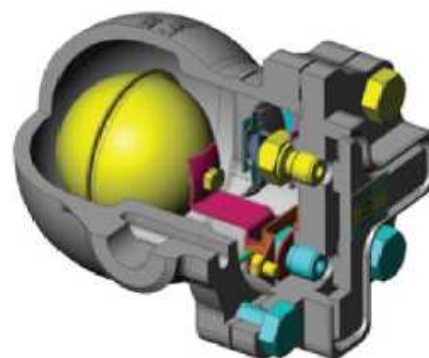


STAINLESS STEEL FLOAT STEAM TRAP SK61

DIMENSIONS (mm) AND WEIGHT (kg)



BSP screwed end connections

DN	A	B	C	ØD	ØD1	L	Weight
1/2"	136,5	81,5	108	98	40	122	3,3
3/4"	136,5	81,5	108	98	40	122	3,3
1"	148,5	92,5	108	120	47	145	4,3

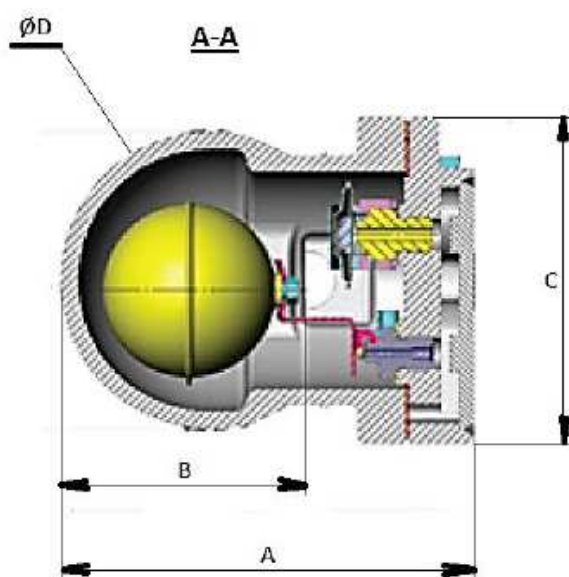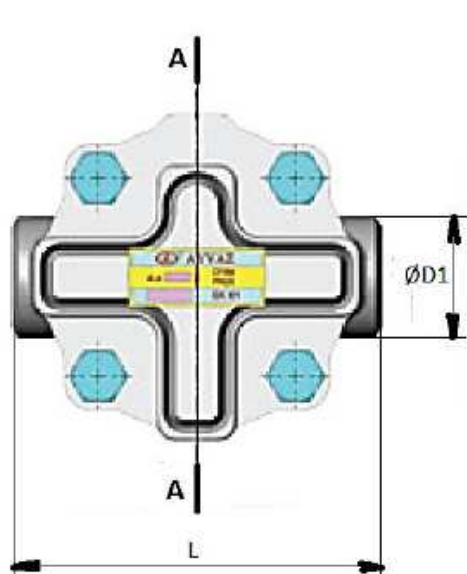


Connecting with flanges PN25

DN	A	B	C	ØD1	L	ØD	Øk	Øg	b	Drillings Nbr.	Weight
15	136,5	81,5	108	98	150	95	65	46	14	4	4,5
20	136,5	91,5	108	98	150	105	75	56	16	4	4,2
25	148,5	99,5	108	120	160	115	85	65	17	4	6,3

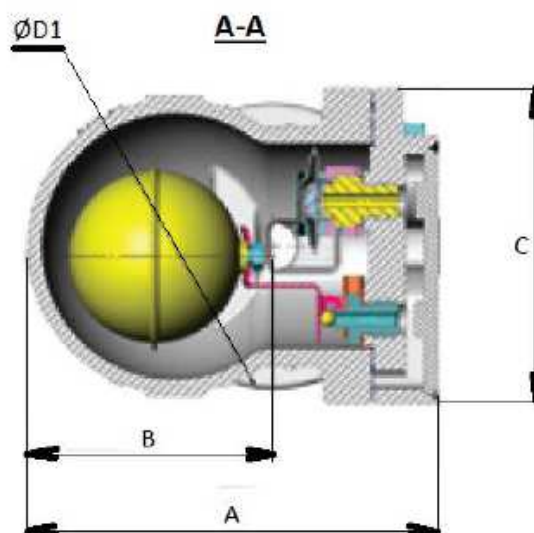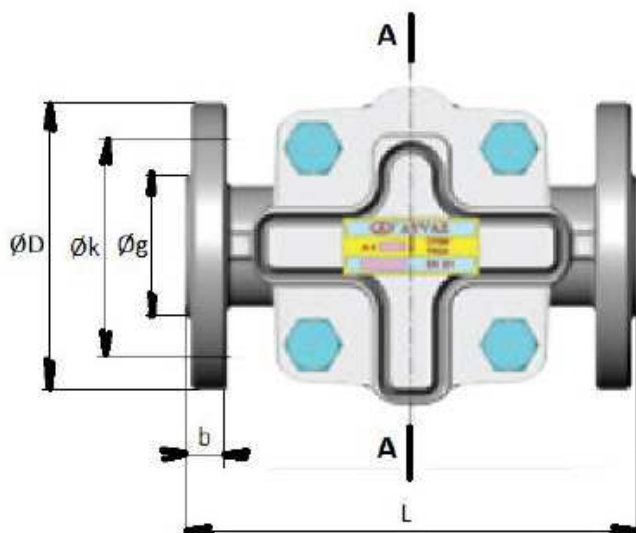

STAINLESS STEEL FLOAT STEAM TRAP SK61

FLOWRATE OF CONDENSATE (Kg/h)

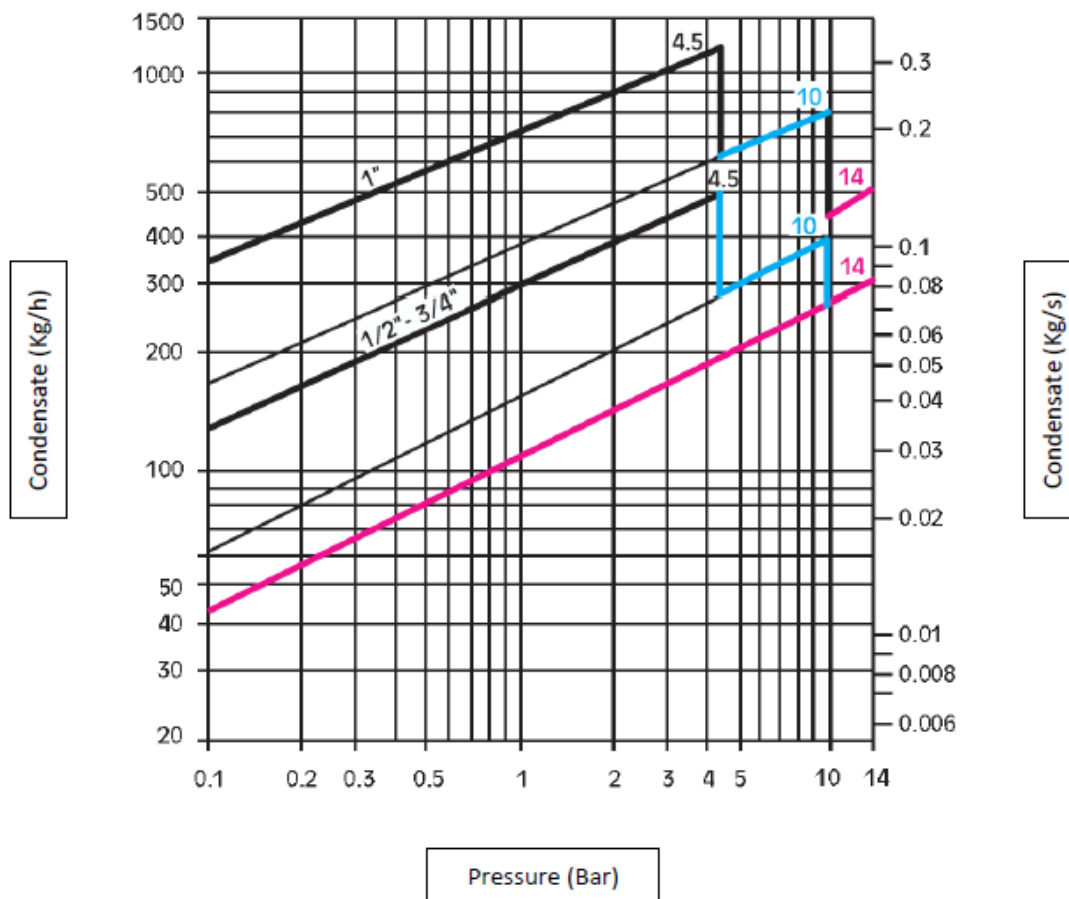

INSTALLATION

The SK61 steam trap must be installed at the lowest point of the piping to drain. As a standard, it is delivered for horizontal installation. Upstream the trap it is recommended to install a shut-off valve and a Y strainer to avoid any damage on the seat due to the passing of impurities. Downstream the trap must be connected to the condensate loop or to the sewage.

STAINLESS STEEL FLOAT STEAM TRAP SK61


MOUNTING

While installing the SK61, the right position has to be respected to allow the operation of the trap. Please respect the following two directions.

- 1 - SK61 has to be installed horizontally taking care of the direction of the arrow stamped on the body :
from steam pipe (upstream) to condensate pie (downstream).
- 2 - Moreover the arrow written on the nameplate must be pointed to the ground.
- 3 - Before installing the trap, shut of the line and remove the pressure. Wait for complete cooling of the line before any operating.
- 4 - Clean carefully the upstream line.
- 5 - Screw the trap on the line after having verified the direction of the two arrows.
- 6 - For the flanged type, use flange's gaskets adapted to steam service.

For the bolting of flanges, use following dimensions :

Flanges PN25 Dimensions					
DN	D	K	L	Qty	ø
15	95	65	14	4	M12
20	105	75	14	4	M12
25	115	85	14	4	M12

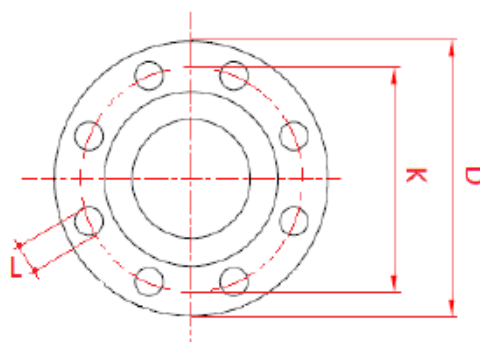

MAINTENANCE

It is not necessary to disassemble the trap from the pipe to proceed to his maintaining.

- 1 - Shutt-off the upstream valve.
- 2 - Drain the downstream line.
- 3 - Verify that there is no pressure and temperature inside the line.
- 4 - Unscrew the 4 bolts of the cover (item 2).
- 5 - Verify the state of the float (item 8). Also verify the state of the lever and the seat (item 5). Clean and/or replace the damaged parts if necessary.
- 6 - Verify the state of the capsule (item 4). Replace it if necessary and clean the seat.
- 7 - Replace the body gasket (item 2) and re-assemble the cover.

SPART PARTS

DN (Theard)	DN (Flanges)	Body gasket	Internal mechanism		
			ΔP 4,5	ΔP 10	ΔP 14
1/2"	15	981203	981232	981233	981234
3/4"	20	981203	981232	981233	981234
1"	25	981204	981235	981236	981237